

211 Peach Way
Columbia, MO
573-474-7881



A-1 Party and Event RENTAL

Fender Passport 300 Pro



1. Unclip speakers from main unit and open of back of case as show in the picture.
2. Pull out all wires: 1 Power cable, 2 Speaker Cables, 1 aux cable, 1 Mic and cable.
3. Set speakers on speaker stands that are included.
4. Plug Power cable in to unit and wall. Make sure master volume and volume of each channel is turned down. Plug speaker cables into the back, bottom right of the main unit and then into the front of each speaker.
5. Plug mic cable into any of the first 4 channels (channels run up and down).
6. Plug Aux cable into either of the last 2 channels.
7. Adjust each individual channel audio and main audio as needed as. Make sure volume is turned up on whatever device is playing music.
8. Any wireless mic or other device can be plugged into the first 4 channels.
9. Crank it up and enjoy!



Feel free to give us a call if more problems persist so we can help you get it working properly!