

AUDIO VISUAL



FENDER SOUND SYSTEM

211 PEACH WAY, COLUMBIA, MO 65203 • 575.474.7881 | 323 MIDLAND DRIVE, JEFFERSON CITY, MO 65101 • 573.635.1516
WWW.A1PARTYFUN.COM • SALES@A1PARTYFUN.COM






FENDER SOUND SYSTEM


STEPS:

1. Unclip speakers from main unit and open of back of case
2. Pull out all cables: 1 Power cable, 2 Speaker Cables, 1 Aux cable, 1 Mic/cable.
3. Set speakers on speaker stands that are included.
4. Plug Power cable in to unit and wall. Make sure master volume and Volume of each channel is turned down. Plug speaker cables into the back, bottom right of the main unit and then into the front of each speaker.
5. Plug mic cable into any of the first 4 channels (channels run up and down).
6. Plug Aux cable into either of the last 2 channels.
7. Adjust each individual channel audio and main audio as needed as. Make sure volume is turned up on whatever device is playing music.
8. Any wireless mic or other device can be plugged into the first 4 channels.
9. Crank it up and enjoy!

STEP 4

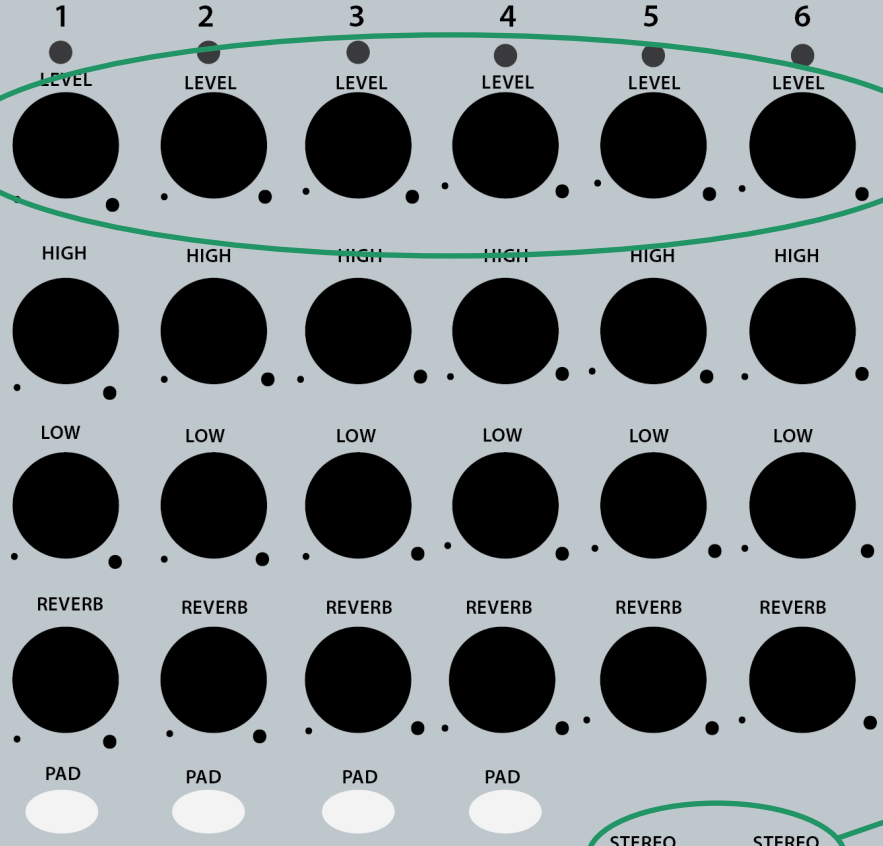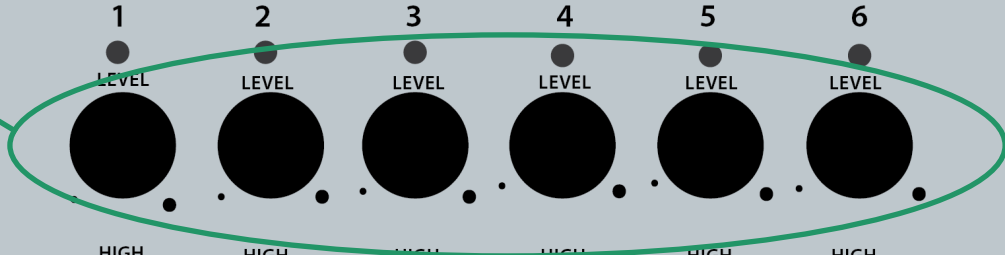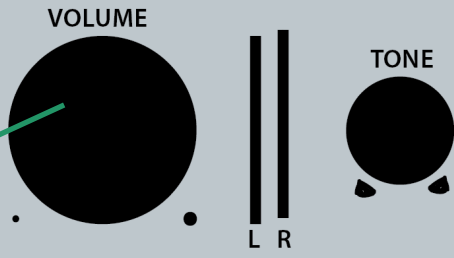

STEP 5

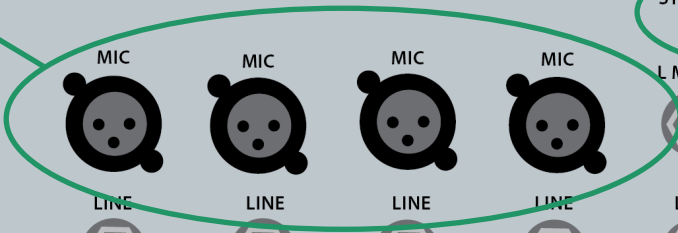

STEP 6

