

# A-1 Party & Event Rental

(573) 474-7881

## Automatic

The LED light fixture has a preprogrammed color fade program. This is accessed via the DIP switches on the back of the light. The speed can be increased as well. Please see the chart below:

Mode	DIP Switches
Master Auto	7, 9, 10 = on
Increase Speed	1, 2, 3, 4, 5, 6 = on

\*To increase speed, turn more switches on.

## Sound-Active

The LED light fixture has preprogrammed sound triggered chases. These are accessed via the DIP switches on the back of the light. Sensitivity may be adjusted using the audio adjustment knob. Please see the chart below:

Mode	DIP Switches
Master Sound	10 = on

## Static Color

The LED light fixture has separate DIP switches for each of the 3 colors (red, green, and blue.) These are accessed via the DIP switches on the back of the light. Each of the 3 colors may be mixed to produce different colors. Please see the chart below for some basic color options.

Mode	DIP Switches
Master Static	8, 9, 10 = on (These must be on to keep color static.)
<b>Static (White)</b>	2, 3, 4, 5, 8, 9, 10 = on
<b>Static (Red)</b>	1, 2, 8, 9, 10 = on
<b>Static (Green)</b>	3, 4, 8, 9, 10 = on
<b>Static (Blue)</b>	5, 6, 8, 9, 10 = on
<b>Static (Pink)</b>	1, 2, 5, 8, 9, 10 = on
<b>Static (Purple)</b>	1, 2, 5, 6, 8, 9, 10 = on