

PLEASE READ ALL INSTRUCTIONS BEFORE HANDLING POUCH
CAUTION RECOMMENDED DUE TO HOT TEMPERATURES AND SHARP TUBE/PIERCER
PERSONAL PROTECTIVE EQUIPMENT RECOMMENDED


POUCH HANDLING

- Unopened pouches may be stored at room temperature.
- Heat pouch in dispenser for a minimum of 4 hours or until pouch reaches 140°F before opening.
- An opened pouch must be maintained at 140°F / 60°C minimum at all times.
- Shelf life of an opened pouch is 5 days if maintained at 140° - 160°F / 60° - 71°C.
- Operators follow GMPs and local food handling ordinances while handling the pouch and the dispenser.


POUCH PREPARATION

1. Remove preheated pouch from dispenser upper warming tray.
2. Lift the ring and pull the dust cover from the fitment.
3. Remove tube/piercer assembly from plastic bag and insert piercer into fitment. **CAUTION, PIERCER END IS SHARP**
4. Rotate piercer clockwise while pushing in so that the piercer punctures the seal membrane inside the fitment. **CAUTION, CHEESE SAUCE IS HOT!**
5. Grasp fitment firmly and thread piercer cap fully onto fitment.

Pouch Preparation #2

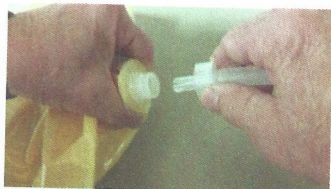

Pouch Preparation #3 & #4

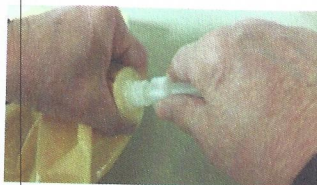

Pouch Preparation #5



Pouch Preparation #6




6. **DO NOT** insert piercer with the fitment lying flat on the table or with the pouch folded over behind the fitment. This may allow the piercer teeth to cut through the outer wall of the pouch


POUCH LOADING

1. Open dispenser door and remove upper warming tray. **CAUTION, DISPENSER IS HOT!**
2. Place preheated pouch in lower tray with pouch fitment protruding down through hole in front of tray. **CAUTION, CHEESE SAUCE IS HOT!**
3. Open tube clamp by rotating cam counterclockwise.
4. Guide tube through the pump slot from top to bottom.
5. Close the clamp by rotating the cam fully clockwise.
6. Place unopened pouch in upper warming tray to preheat and place tray in dispenser.
7. Close the door.

Pouch Loading #2 & #3

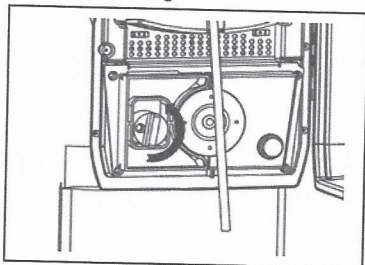

Pouch Loading #4

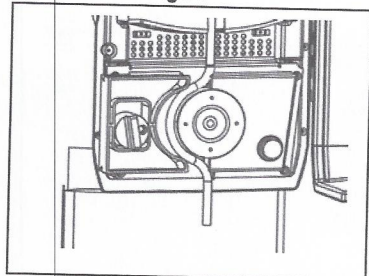

Pouch Loading #5

